# User's Manual for the MemoryStar BOXX

Distinguished Customers,
thank you for purchasing the MemoryStar BOXX. Before getting started, please read the user's manual carefully so as to ensure proper operation and optimized performance of this product. With stylish outer appearance, compact structure, high fidelity sound and multi-functionality, it has obtained patents concerning its outer appearance and adopted advanced electric and sound technology in the industry, ultimately making itself the best choice to hook up with your devices such as tablet, cellphone and digital music player etc. perfectly by presenting you exceptional stereo effect either you are at home, on vacation or at work.

## I. Precautions

Please store and use this product at the ambient temperature;
Do not expose this product to the rain or damp surroundings;
Prevent this product from falling that could result in serious damage;
Do not dismantle, repair or modify this product on your own;
In order to avoid any risk, do not dispose this product inappropriately or toss it into the fire as there is a built-in lithium battery.

## II. Considerate Hints

1) Do not turn up the volume to a fair high level constantly as this could shorten the service life of this product or impair your hearing;
2) When encountering any fault during operation, please cut off the power supply and disconnect the USB cable to prevent further damage to the speaker or other components;
3) The Bluetooth® transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.

## III. Outer Appearance and Function Buttons

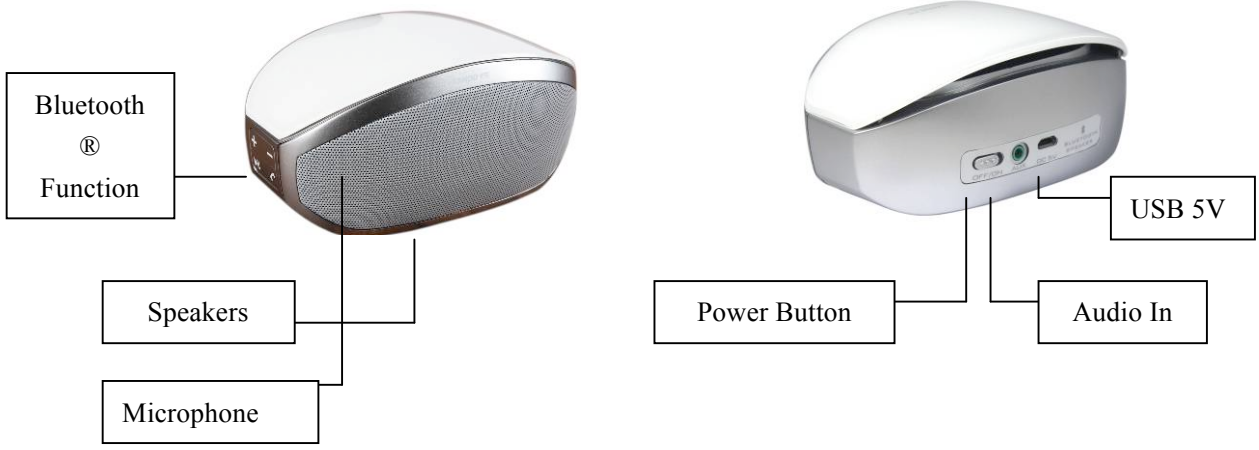

◀V- /Jump to last track/Turn down the volume: Press this button for last track, or press and hold it to bring down the volume under Bluetooth® mode.

V+▶ /Jump to next track/Turn up the volume: Press this button for next track, or press and hold it to bring up the volume under Bluetooth® mode.

▶II/ /Pause/Play/Pick up the call: Press this button to play and pause under Bluetooth® mode; pick up or to reject the incoming calls under Bluetooth® mode.

## IV. Product Parameters

Product Model：MemoryStar BOXX
Transmission Distance：≤15M (depending upon operation environment and devices to which it connects)
USB Recharge Voltage: DC 5V
Output Power: 3W×2
Frequency Response: 90Hz-20KHz
Sensitivity: 80db±2db
Signal to Noise Ratio (SNR): ≥76dB
Product Dimensions: 58×73×120mm

## V. System Composition

| | | |
|---|---|---|
| 1） | Speaker | 1set |
| 2） | 3.5 Audio Cable | 1piece |
| 3） | USB Power Cable | 1piece |
| 4） | Power Adapter | 1piece |
| 5） | User's Manual | 1copy |

## VI. Common Function Description

**Power-on Status:**

Press the Power Button to turn the speaker on and it beeps simultaneously with the blue indicator flashing. The volume is set to 60% by default.

**Bluetooth® Connection:**

Once switched on, the speaker starts searching for other Bluetooth® devices automatically and at the same time, the blue indicator goes on and off. When found a Bluetooth® device, the speaker prompts whether to pair up or not. If selected Yes, it pairs up with the device and meanwhile, the blue indicator flashes slowly and a beep is also generated by the speaker. If failed to detect any other Bluetooth® device within 5minutes, the speaker will shut itself down. Turn it off and turn on again to start search.

Hint: All the paired devices will engage in automatic connection when the speaker is turned on.

Please recharge when the battery loses its power considerably or the connection is failed.

**Bluetooth® Music Playing:**

When connected for music playing via Bluetooth®, press ◀V- and V+▶ to select tracks upwards or downwards. Press and hold ◀V- and V+▶ to adjust the volume. While playing music, press ▶II to pause and ▶II to resume. During music playing under Bluetooth® mode, double click ▶II/ to dial out last cell phone number you already dialed with cell phone.

**Hands-free function:**

After connected with the cellphone successfully via Bluetooth®, the speaker beeps when a call comes in.

Press ▶II/ to pick it up and to terminate the conversation, press one more time.

When a call comes in with beeping, double click ▶II/ to reject the call.

**AUX Playback:**

Use the supplied 3.5mm audio cable to connect the speaker to other music player such as computer by plugging one end to the speaker's AUX port and the other end to the music player's audio port. When the music player starts playing music, the speaker sounds right away. Tracks selection or volume adjustment is done by the music player.

Hints: 3 buttons of V-, V+ and ⏯/📞 are functionless under AUX mode.

**Intelligent Quick Recharge:**

Recharge can be performed in the standby mode or power-off situation. Before recharging, plug the Micro-USB end of the supplied USB cable to the speaker's USB port and the other end to the USB port of the computer or the USB recharger. When fully recharged, the red indicator goes off.

## VII. Compatibility

Wireless：Devices configured with Bluetooth® 2.1+EDR or higher version such as IPAD, IPHONE (at least the second generation IPHONE installed the IPHONE software 3.1), IPOD TOCH and MAC as well as a majority of intelligent phones or computers that support Bluetooth®.

Bluetooth® V2.1+EDR consisting of protocols like A2DP, AVRCP and HFP

## VIII. Troubleshooting

| Faults / Phenomena | Solutions |
|---|---|
| Unable to pair up with other devices | 1. Check whether the speaker is still in the process of searching. If yes, switch it off and switch on again..<br>2. Check if there are too many Bluetooth® devices in the proximity causing difficulty in connection. If yes, please turn them off to avoid connection failure. |
| The sound is rather low or distorted | 1. Check the Bluetooth® device's volume and then adjust it to a proper level.<br>2. Recharge the battery |
| The music stops from time to time | 1. Check whether the speaker's effective transmission range is exceeded or there is an obstacle standing between the speaker and other Bluetooth® devices. |
| The Bluetooth® indicator remains off | 1. It suggests the battery power drops quite low and retry once being recharged.<br>2. Turn it on again. |